



NOTE FOR SERVICE
 This model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE (primary) and NEUTRAL (secondary) side GND. Don't short between the LIVE side GND and NEUTRAL side GND or never measure with a measuring apparatus (voltmeter etc.) the LIVE side GND and NEUTRAL side GND at the same time. If above note will not be kept, a fuse or any parts will be broken.