

## WATER-LEVEL INDICATOR USING 7-SEGMENT DISPLAY



## RIJU THAZHATHU VEETTIL

his water-level indicator uses a 7-segment display, instead of LEDs, to indicate the water level (low, half and full) in the tank. Moreover, a buzzer is used to alert you of water overflowing from the tank. The circuit shows the water level by displaying L, H and F for low, half and full, respectively.

The circuit uses five sensors to sense the different water levels in the a high voltage at the input pin of the NOT gate, it outputs a low voltage. Similarly, for a low voltage at the input pin of the NOT gate, it outputs a high voltage.

When the tank is empty, the input pins of IC 7404 are pulled high via a 1-mega-ohm resistor. So it outputs a low voltage. As water starts filling the tank, a low voltage is available at the input pins of the gate and it outputs a high voltage.

10 also goes high. Now as both pins 9 and 10 of gate N9 are high, its output pin 8 also goes high. As a result, positive supply is applied to DIS3 and it shows 'L' indicating low level of water in the tank.

Similarly, when water in the tank touches the half level, pins 4 and 5 of AND gate N8 become high. As a result, its output also goes high and DIS2 shows 'H' indicating half level of water in the tank. At this time, pin 9 of


gate N9 also goes low via gate N4 and DIS3 stops glowing.

When the water tank becomes full, the voltage at pin 1 of gate N1 and pin 3 of gate N2 goes low. Output pin 3 of gate N7 goes high and DIS1 shows 'F' indicating that the water tank is full.

When water starts overflowing the tank, pin 13 of gate N6 goes low to make output pin 12. The buzzer sounds to indicate that water is overflowing the tank and you need to switch off the motor pump.

Assemble the circuit on a general-purpose PCB and enclose

in a suitable box. Use a non-corrosive material such as steel strip for the five sensors and hang them in the water tank as shown in the circuit diagram. Use regulated 5V to power the circuit.

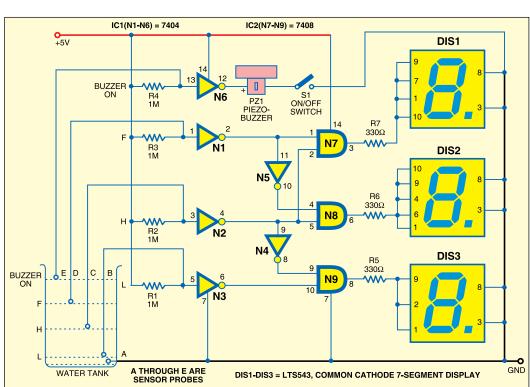

tank. Sensor A is connected to the negative terminal (GND) of the power supply. The other four sensors (B through E) are connected to the inputs of NOT gate IC 7404. When there is

When the water in the tank rises to touch the low level, there is a low voltage at input pin 5 of gate N3 and high output at pin 6. Pin 6 of the gate is connected to pin 10 of gate N9, so pin